



# Electrical and pneumatic diagram

**FS-P**

2024

[WWW.FS-HP.COM](http://WWW.FS-HP.COM)

Ver. 1.1



# Four wheels configuration

Electrical and pneumatic diagram

## Front axle



FL



FR



RL



RR

2 x Push-in T-connector 3x6mm

4 x Push-in metal L- fitting

## Rear axle

AIR LINE PA12 6x1mm-BLACK

(+12V) to battery



## FS-P AirBox\_1

(-) to battery or ground point



Manual control


▲ - UP  
▼ - DOWN

CAR FUSE 10A


Mode switch

(I)- always ON  
0- OFF  
(II)- ON when ignition is ON

Wireless button for FS-P control

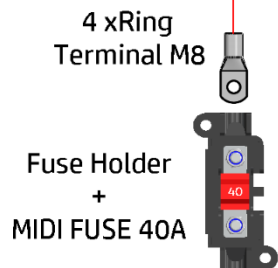

Ignition switch mode (optional)

 

white (+12V) to ignition

